



P18.40-0225-06

☒☒☒	Removal, installation		
1	Remove timing case cover		AR01.40-P-8000A
2	Use suitable pliers (1) to withdraw non-return valve (8) from the crankcase	<p>ⓘ Installation: press in new non-return valve (8) by hand.</p> <p>ⓘ The non-return valve (8) prevents the oil reservoir for the chain tensioner running dry when the engine is switched off. See oil circuit ↓ Engine oil pressure circuit as-built description</p>	GF18.00-P-1106AG
3	Install in the reverse order		